

GP-2000 Externally Piloted Reducing Valve

Troubleshooting - When Downstream Pressure Continually Rises

Test main valve and pilot:

- Isolate valve
- Back adjusting bolt off
- Remove tubing from pilot and main valve
- Turn steam on
- If steam leaks at top port, the pilot may be dirty
 - Replace pilot capsule K-2110
- If steam leaks at middle port, the main valve may be dirty
 - Lap main valve and seat

